



NO BOLTS CLEAT


INSTALLATION INSTRUCTIONS

1) Retract the keepers to their natural stop, remove the top part of the cleat from the base and place the base of the cleat onto the mounting structure. Fasten the base down with M8 fixings.

Note: As Ellis have no control on the tolerances for standard channel sections we **would not** advise the use of the twist foot base to be used as a means of fixing the cleat to channel.



2) Lay the cable into the base of the cleat.

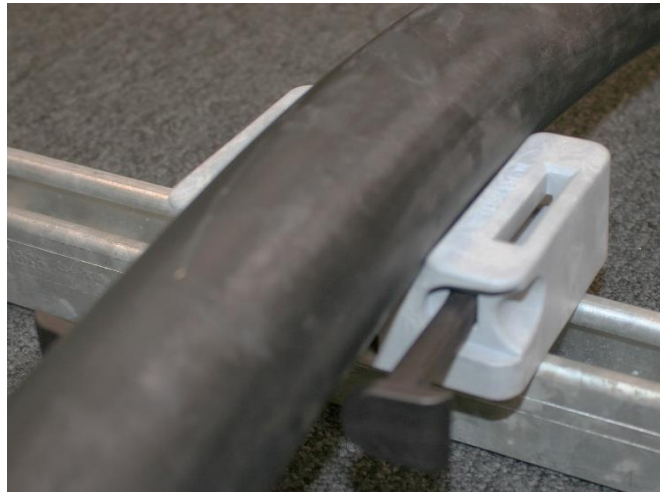


3) Insert the top part of the cleat into the base and apply firm downwards pressure. Whilst maintaining pressure on the top push the two keepers home to lock the cleat in place.

Note: A slight 'wiggle' of the top moulding may be required to ensure the teeth on the keepers line up with the corresponding teeth on the top.



4) To stack a new cleat on top of existing cleats position the twist foot base into the recess in the top of the installed cleat. Turn the base clockwise 90° until it stops and lines up with the cleat below. Repeat steps 1-3 to install the cable.

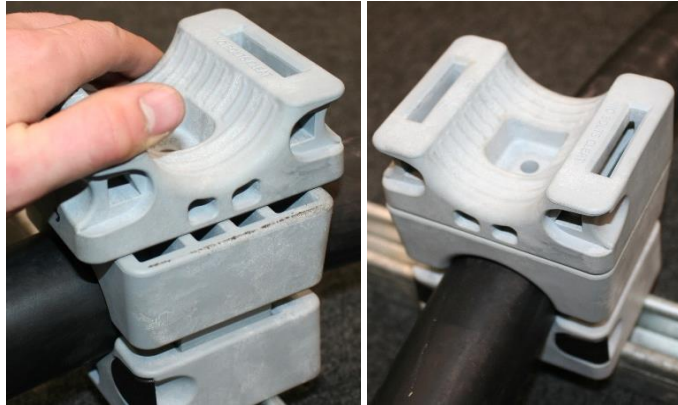

NOTE: No Bolts Cleat should not be stacked more than 3 high, contact Ellis for further detail.

